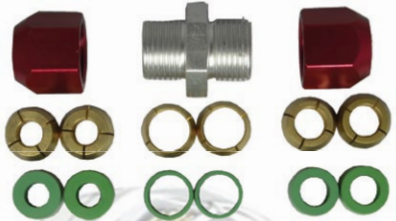
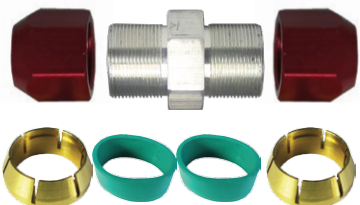



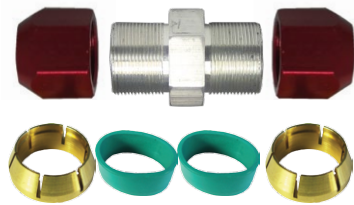



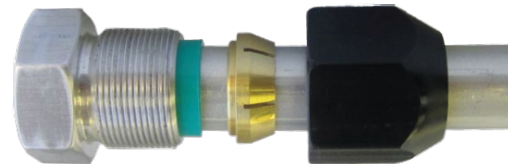


## 0117M - A/C MASTER LINE SPLICE & BLOCK OFF ASSORTMENTS

<p><b>76000</b>          5/16" - 3/8" - 1/2"          UNIVERSAL LINE SPLICE</p> 	<p><b>76002</b>          3/8"          UNIVERSAL LINE SPLICE</p> 
<p><b>6050</b>          BLOCK OFF CAPS USED WITH:          • 76000 • 76001          • 76002 • 76003</p> 	<p><b>5031</b>          O-RING SEAL  <b>MUST BE USED WITH          6050 BLOCK OFF CAP</b></p>  <p><b>19967</b>          PERMATEX BLUE REMOVABLE          STRENGTH THREADLOCKER  <b>MUST BE USED          ON THREAD FOR          BLOCK OFF CAPS</b></p> <p>• 6050          • 6051</p> 
<p><b>76011</b>          5/8"          UNIVERSAL LINE SPLICE</p> 	<p><b>6051</b>          BLOCK OFF CAPS USED WITH:          • 76011</p>  <p><b>5032</b>          O-RING SEAL  <b>MUST BE USED WITH          6051 BLOCK OFF CAP</b></p> 
<p><b>76012</b>          3/4"          UNIVERSAL LINE SPLICE</p> 	<p><b>76505</b>          3/4"          BLOCK OFF CAP</p> 


**Block Off Cap Installation Instructions For -76000, 76001, 76002, 76003**

- Remove red nut from one end of the line splice.
- Install 5031 O-ring seal on end where nut was removed.
- Apply red thread locker on side that will accept 6050 Block off Cap.
- Finger tighten, using 7/8" (22mm) wrench on nut and torque to max of 25 ft-lbs


**Block Off Cap Installation Instructions For -76011, 76012, 76505**

- Remove red nut from one end of the line splice.
- Install 5032 O-ring seal on end where nut was removed.
- Apply red thread locker on side that will accept 6051 Block off Cap.
- Finger tighten, using 1" (25mm) wrench on nut and torque to max of 25 ft-lbs
- Torque values for 76012 - 76505 : 18 - 20 ft-lbs.

Fax: 905-335-0327  
Phone: 1-800-651-7445  
E-mail: [info@fmsinc.com](mailto:info@fmsinc.com)  
<http://www.fmsinc.com>

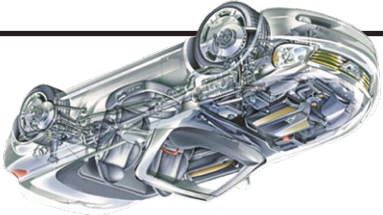

## 017M - A/C MASTER LINE SPLICE & BLOCK OFF ASSORTMENTS

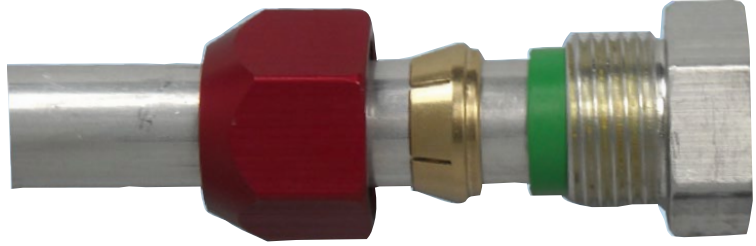

### **BLOCK OFF CAP INSTALLATION INSTRUCTIONS FOR 76000, 76001, 76002, 76003**

- Remove red nut from one end of the line splice
- Install 5031 O-ring seal
- Apply red thread locker on side that will accept 6050 Block off cap
- Finger tighten, using 7/8"(22mm) wrench on nut and torque to max of 25 ft-lbs

### **BLOCK OFF CAP INSTALLATION INSTRUCTIONS FOR 76011, 76012, 76505**

- Remove red nut from one end of the line splice
- Install 5032 O-ring seal on end where nut was removed
- Apply red thread locker on side that will accept 6051 Block off cap
- Finger tighten, using 7/8"(22mm) wrench on nut and torque to max of 25 ft-lbs
- Torque values for 76012 - 76505 : 18 - 20 ft-lbs.