



0153 - KOOL-AIR KWIK-CONNECT TUBE TO HOSE ASSORTMENT

5940 5/16" tube to hose replaces 5/16" tube.
COMPLETE 12' HOSE & TWO FITTINGS



REPLACEMENT COMPONENTS

5930 **x2**(fitting) + 5324HP (clamp/cage) + RB516-12 Hose

Use with RB516 hose



5941 3/8" tube to hose replaces 3/8" tube.
COMPLETE 12' HOSE & TWO FITTINGS



REPLACEMENT COMPONENTS

5931 **x2**(fitting) + 5324HP (clamp/cage) + RB516-12 Hose

Use with RB516 hose



5942 1/2" tube to hose replaces 1/2" tube.
COMPLETE 12' HOSE & TWO FITTINGS




REPLACEMENT COMPONENTS

5932 **x2**(fitting) + 5324HP (clamp/cage) + RB1332-12 Hose

Use with RB1332 hose



5943 5/8" tube to hose replaces 5/8" tube.
COMPLETE 12' HOSE & TWO FITTINGS

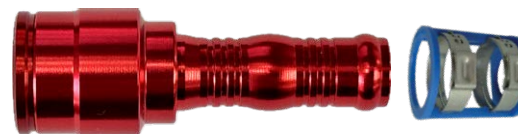

REPLACEMENT COMPONENTS

5933 **x2**(fitting) + 5327HP (clamp/cage) + RB12-12 Hose

Use with RB12 hose



5944 3/4" tube to hose replaces 3/4" tube.
COMPLETE 12' HOSE & TWO FITTINGS



REPLACEMENT COMPONENTS

5934 **x2**(fitting) + 5327HP (clamp/cage) + RB58-12 Hose

Use with RB58 hose



5141 Tube Cleaning Pad

Clean the tube in
a circular motion



SAFETY & PREPARATION

Line splice installation for qualified repair Technicians. Use Safety glasses and gloves. All refrigerant must be recovered and system must be at atmospheric pressure.
TO BE USED WITH ALUMINUM TUBING.

TUBE JOINER/BLOCK OFF INSTALLATION INSTRUCTIONS

- 1) Cut section of damaged and leaking A/C tube using a tuber cutter, leaving a minimum of 2" of straight tube.
- 2) Debur inner and outer surface of each end of tube (joiner) or one end for the (block off) using FMSI part number 5429 or CT-208 OR SIMILAR.
- 3) Use Scuff pad and clean outside of tube on both sides of joiner in a circular motion to avoid longitudinal lines.
- 4) Slide Kool-Air Kwik Connect joiner or block off onto cleaned and deburred tube. Push on until stopped.

(ENG)

MAKE SURE TO REAM TUBE BEFORE USE



SÉCURITÉ ET PRÉPARATION

Installation de l'union pour les techniciens de réparation qualifiés. Utilisez des lunettes et des gants de sécurité. Tout le réfrigérant doit être récupéré et le système doit être à la pression atmosphérique.
À UTILISER AVEC DES TUBES EN ALUMINIUM.

INSTRUCTIONS D'INSTALLATION DE L'UNION/BLOCAGE

- 1) Coupez la section du tube A/C endommagé et qui fuit à l'aide d'un coupe-tube, en laissant un minimum de 2 pouces de tube droit.
- 2) Ébavurez les surfaces intérieure et extérieure de chaque extrémité du tube (union) ou une extrémité pour le (bouchon) à l'aide de l'outil numéro de pièce FMSI 5429 ou CT-208 OU SIMILAIRE
- 3) Utilisez un tampon abrasif et nettoyez l'extérieur du tube des deux côtés de l'union dans un mouvement circulaire pour éviter les lignes longitudinales.
- 4) Faites glisser l'union ou le bouchon Kool-Air Kwik Connect sur le tube nettoyé et ébavuré. Pousser jusqu'à l'arrêt

(FRE)